

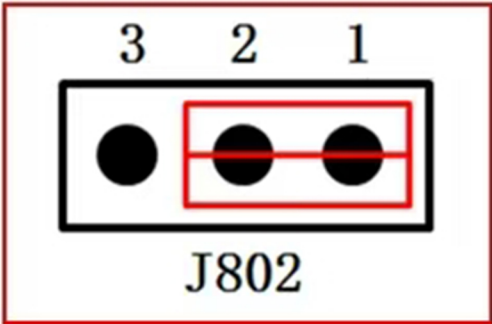
AT-6666PRO工程模式

HAM: 28.000-29.695MHz

BAND名称	信道数	频率范围	调制模式	功率档位	扩展方式
A	40CH	28.000-28.195MHz	AM/FM/SSB	FM: 50W AM: 80W(PEP) SSB: 80W(PEP)	关机状态下同时按住【MEM】+【BAND】开机， 旋转【PUSH】开机选择HAM.BAND，再长按 【FUNC】确认
B	40CH	28.200-28.395MHz			
C	40CH	28.400-28.595MHz			
D	40CH	28.600-28.795MHz			
E	40CH	28.800-28.995MHz			
F	40CH	29.000-29.195MHz			
G	40CH	29.200-29.395MHz			
H	40CH	29.400-29.595MHz			
I	20CH	29.600-29.695MHz			

BAND选择操作说明：短按BAND键选择所需要的BAND

HF: 24.715-30.105MHz

BAND名称	信道数	频率范围	调制模式	功率档位	扩展方式
A	40CH	25.615-26.055MHz	AM/FM/SSB	FM: 50W AM: 80W(PEP) SSB: 80W(PEP)	关机状态下同时按住【MEM】+【BAND】开机， 旋转【PUSH】开机选择HF.BAND，再长按 【FUNC】确认
B	40CH	26.065-26.505MHz			
C	40CH	26.515-26.955MHz			
D	40CH	26.965-27.405MHz			
E	40CH	27.415-27.855MHz			
F	40CH	27.865-28.305MHz			
G	40CH	28.315-28.755MHz			
H	40CH	28.765-29.205MHz			
I	40CH	29.215-29.655MHz			
J	40CH	29.665-30.105MHz			
K	40CH	24.715-25.155MHz			
L	40CH	25.165-25.605MHz			
M	40CH	21.000-21.195MHz	AM/FM/SSB		
N	40CH	21.200-21.395MHz			
O	21CH	21.405-21.500MHz			

BAND选择操作说明：短按BAND键选择所需要的BAND